

---

## Service hours counter

The service hours counter function is used to set time intervals (per 10 hours) for regular maintenance purposes on the machine and / or pump.



After expiration of the set time interval, the control panel will provide the signal { OIL }. This means that the interval has expired and maintenance needs to be done. The machine will still operate normally but the signal will keep coming back.

Moreover, the function also displays the operation hours during the time interval. Please note that the function only counts the hours that the pump is running.

This function is not activated in the standard factory settings.

### Activate and set service hours counter

---

The machine is ON



Push the [FUNCTION SELECT] button for at least 3 seconds.



After 3 seconds, the operation time (per hour) will appear on the display for 2 seconds (value between 0 and 999).



The display will switch to the pre-set service hours interval (per hour). When the function has never been activated, OFF will appear on the display after 3 seconds.



Push the [ + | VACUUM STOP ] or [ - | STOP ] buttons to activate and set the service hours interval. The time on the display can be set per 10 hours. So the minimum time is 10 hours and maximum 990 hours. When set to OFF, the function will be de-activated.).



Push the [REPROG] button to store the settings. The operation hours will also be reset by this procedure. The machine will return automatically to the operation mode.

---