



SHRINK WRAPPER - TORSION BAR

Replacement Procedures


1. Loosen lock nut on torsion bolt.

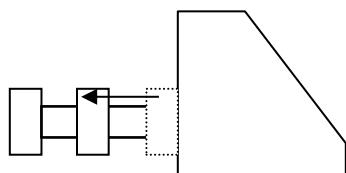


2. Loosen and remove torsion bolt.

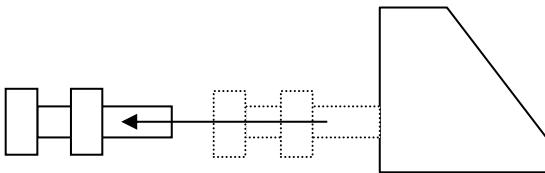


3. Loosen and remove hood height adjuster mounting bolts.

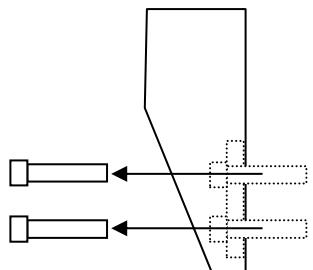

4. Open hood frame assembly to 90 degrees and hold it in place
5. Loosen and remove torsion bar housing mounting bolts.
6. Remove housing from the torsion bar and place hood frame assembly back onto its flat position.

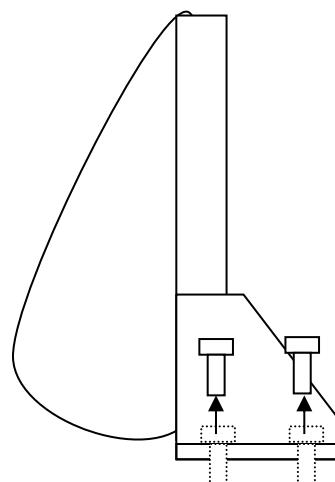


7. Loosen anchor bolt on torsion bar anchor assembly.

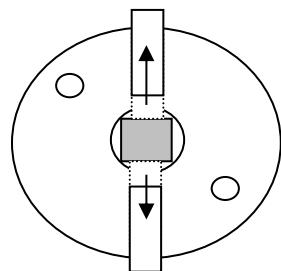

8. Slide out torsion bar.

PLEASE OBSERVE ORIENTATION OF L-END AND FLAT END OF BAR WHILE REMOVING THE TORSION BAR.

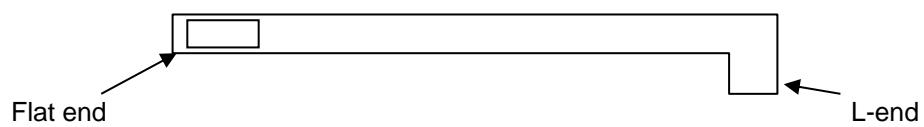

9. Reverse these procedures to install a new torsion bar.